General Purpose Pushbutton Switches and Indicators

Series 11/21

Rear Mounted Pushbuttons and Indicators

FEATURES

- 250 VAC/5 A, 220 VDC/0.1 A, 24 VDC/2 A snap action 42 VAC/0.1 A, 42 VDC/0.1 A low-level
- Minimum depth: Series 11: 1.08" Series 21: 0.944"
- Mounts in panels to 0.157 inch thick
- Choice of front panel mounting nut
- 5-million operations, low level
- Front panel replaceable lens and lamp

Reference				
International Approvals	page 35			
Oil & watertight versions	page 52			
Accessories	page 166			
Lamps	page 152			
Technical Information	page 161			

To order: first select switch or indicator desired, indicating contact and terminal type when applicable. Then order lens and illumination separately.

Series 11

Lighted Pushbuttons & Indicators

(Order lens, lamp, and front mounting nut separately)

Switch Element	Momentary	Maintained			
	Round	Round			
Snap Action					
1-pole Form Z	11-131.8 🗆 🗆	11-271.8 🗆 🗆			
2-pole Form Z	11-132.8 🗆 5	11-272.8 🗆 5			
3-pole Form Z	11-133.8 🗆 5	11-273.8 🗆 5			
4-pole Form z	11-134.8 🗆 5	11-274.8 🗆 5			
Low Level					
1 N.O. contact	11-435.836	11-475.836			
1 N.C. contact	11-436.836	11-476.836			
2 N.O. contacts	11-431.836	11-471.836			
2 N.C. contacts	11-432.836	11-472.836			
1 N.O., 1 N.C. contact	11-433.836	11-473.836			
Indicator					
Solder connection	11-030.805				
Length to match low level. Universal terminations	11-031.806				

Select contact and terminal type where applicable

1st digit is always 8 (Case color is gray)

Contact material (2nd digit): 1 = Silver, 2 = Gold over silver Terminal type (3rd digit): 2 = 0.110" Q.C., 5 = Solder





Series 21 pushbutton snap action





Lenses

☐ Add color digit

Description	Round	0	1	2	3	4	5	6	7	8	9
Lens, with diffuser (lamp)	11-931. 🗆	1		1		1	1	1			1
Lens, no diffuser (LED)	11-932. 🗆			1		1	1	1	1		

□ 0 = Black, 1 = Solar Black, 2 = Red, 3 = Orange, 4 = Yellow, 5 = Green, 6 = Blue 7 = Clear, 8 = Gray, 9 = White. Black and Gray are opaque.







Mounting Nuts

Description	Part Number
Rear mounting nut (included with switch)	11-934
Front mounting nut required (not included)	
A. Knurled, open face, bright chrome, ø 14 rnm	11-935
B. Knurled, flat face, bright chrome, ø 14 mm	11-936
C. Knurled, conical face, bright chrome, ø 16 mm	11-937

General Purpose Pushbutton Switches and Indicators

Series 21

Unlighted Pushbuttons

(Order button and front mounting nut separately)

Switch Element	Momentary	Maintained Round		
	Round			
Snap Action				
1-pole Form Z 21-131.8 □ 5		21-271.8 🗆 5		
2-pole Form Z	21-132.8 🗆 5	21-272.8 🗆 5		
3-pole Form Z	21-133.8 🗆 5	21-273.8 🗆 5		
Low Level	A Section 1			
1 N.O. contact	21-435.836	21-475.836		
1 N.C. contact	21-436.836	21-476.836		
2 N.O. contacts	21-431.836	21-471.836		
2 N.C. contacts	21-432.836	21-472.836		
1 N.O., 1 N.C. contact	21-433.836	21-473.836		

Select contact material where applicable

1st digit is always 8 (case color is gray)

Contact material (2nd digit): 1 = Silver, 2 = Gold over silver








Mounting Nuts & Buttons

Rear mounting nut (included with switc	h	21-934
Front mounting nut required (not include	ied)	
A. Knurled, open face, bright chrome,	ø 10 mm	21-935
B. Knurled, flat face, bright chrome, ø 10 mm		21-936
C. Knurled, conical face, bright chrome, ø 14 mm		21-937
Button	Black	21-931.0
	Red	21-931.2
	Yellow	21-931.4
	Green	21-931.5
	Blue	21-931.6
	White	21-931.9


Dimensions & Mounting Information

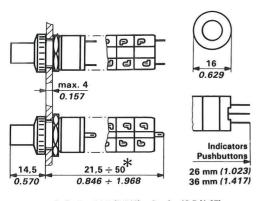


Indicator, 21.5 (0.846) 1 pole, 27.5 (1.08)

3 pole, 42.5 (1.67) 4 pole, 50 (1.97) 2 pole, 35 (1.38)


Series 11 Snap acting switch element

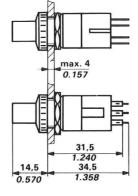


Low level switch element

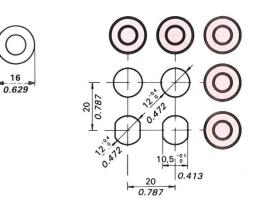


Series 11 mounting

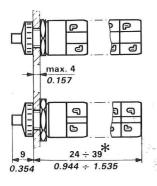


Series 21 Snap action switch element

 

 
1 pole, 24 (0.944) 2 pole, 31.5 (1.24) 3 pole, 39 (1.54)



Series 21

 

Low level switch element

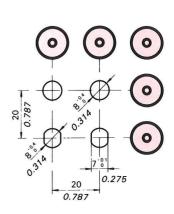

Series 21 mounting