

Product description

Bayonet Male panel mount connector, Contacts: 2, unshielded, solder, IP40


Area Part no. series 710 09 0973 00 02


Illustration

Scale drawing

Contact arrangement (Plug-in side)



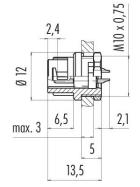

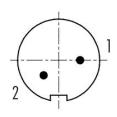

You can find the component part drawing and assembly instructions on the next page.

Technical data

General features

Overvoltage category

EMC compliance

Insulating material group

09 0973 00 02
Male panel mount connector
Connector pin straight
Bayonet
solder
IP40
0.25 mm² / AWG 24
-40 °C / 85 °C
> 500 Mating cycles
1.60
85369010
DE
125 V
1500 V
4.0 A
≥ 10 ¹⁰ Ω
1

II

Ш

unshielded



Product description

Bayonet Male panel mount connector, Contacts: 2, unshielded, solder, IP40

Area Part no. series 710 09 0973 00 02


Material

-1 (Lead)
ab-4429-9427-0d7c54705b75
2)

Classifications

eCl@ss 11.1 27-44-01-09 ETIM 9.0 EC003569

Assembly instructions / Panel cut-out

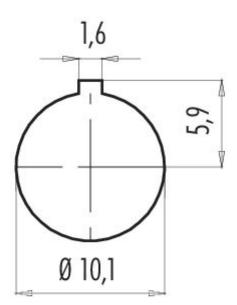




Product description

Bayonet Male panel mount connector, Contacts: 2, unshielded, solder, IP40

Area Part no. series 710 09 0973 00 02

Component part drawing

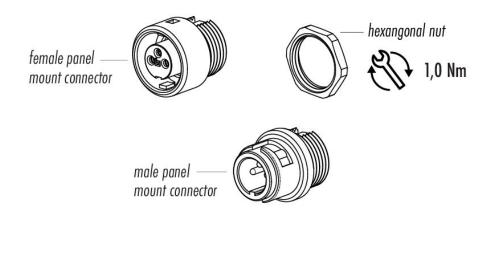



Product description

Bayonet Male panel mount connector, Contacts: 2, unshielded, solder, IP40

Area Part no. series 710 09 0973 00 02

Security notices

The connector must not be plugged or unplugged under load. Non-observance and improper use can result in personal injury.

The connectors have been developed for applications in plant engineering, control and electrical equipment construction. The user is responsible for checking whether the connectors can also be used in other areas of application.

Connectors which are used in circuits with voltages dangerous to the touch may only be installed and used by, or under the supervision of, persons with electrical engineering training, taking into account the applicable regulations and standards.

The user must take suitable safety precautions to ensure that the connector cannot be accidentally disconnected.

The plug connector is not suitable for mains voltages Please observe the pollution degree and the overvoltage category. For further information, please refer to the download center "Technical Information".